



Warning note:

Juhised kehtivad kõikidele dušiseinte mudelitele!

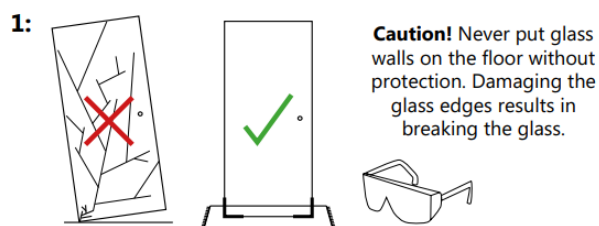

- 1) Ärge kunagi asetage klaasist seinu põrandale ilma kaitsva aluseta. Klaasi servade kahjustused põhjustavad klaasi purunemise.

- 2:** The shower walls and side panels must be mounted **directly on the ground** in order to guarantee stability and durability. The profiles must have **direct contact** to the floor when mounted onto the wall. After mounting, siliconize the profiles to the floor and wall (as seen on the pictures below).

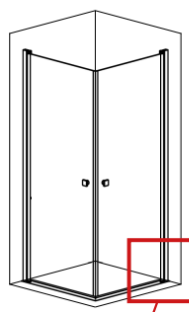

- 1) Vastupidava ja stabiilse paigalduse tagamiseks tuleb seina külge kinnitatud dušiseinte külgprofiilid kinnitada põrandapinnale. Peale paigaldamist tuleb kateprofiili ja plaadi kokkupuuteala tihendada sanitaarsilikoniga (vt pilti)

